

2004 Vehicle	Section Number	Section Title	Current Tool Number	Past Tool Number	Tool Name
Excursion	100_040	Noise, Vibration and Harshness	107-R2102		EngineEAR/ChassisEAR
Excursion	100_040	Noise, Vibration and Harshness	100-F027	014-00344	Electronic Vibration Analyzer
Excursion	100_040	Noise, Vibration and Harshness	107-R2100		EngineEAR
Excursion	100_040	Noise, Vibration and Harshness	134-R0135		Ultrasonic Leak Detector
Excursion	100_040	Noise, Vibration and Harshness	308-021	T75L-4201-A	Gauge, Clutch Housing
Excursion	100_040	Noise, Vibration and Harshness	100-002	TOOL-4201-C	Dial Indicator Gauge with Holding Fixture
Excursion	204_000	Suspension System — General Information	100-D002	D78P-4201-B	Dial Indicator Gauge With Holding Fixture
Excursion	204_000	Suspension System — General Information	211-003	T64P-3590-F	Steering Arm Remover
Excursion	204_01A	Front Suspension — 4x2	205-086	T74P-4635-C	Installer/Remover, C-Frame and Screw
Excursion	204_01A	Front Suspension — 4x2	204-D015	D89P-3010-A	Ball Joint Remover
Excursion	204_01A	Front Suspension — 4x2	204-D016	D89P-3010-B	Ball Joint Replacer
Excursion	204_01A	Front Suspension — 4x2	211-D006	D84P-3395-A4	Receiving Cup
Excursion	204_01A	Front Suspension — 4x2	211-023	T74P-3044-A1	C-Frame and Clamp Assembly Tool
Excursion	204_01A	Front Suspension — 4x2	211-003	T64P-3590-F	Pitman Arm Puller
Excursion	204_01B	Front Suspension — 4x4	105-R0057		73III Automotive Meter
Excursion	204_01B	Front Suspension — 4x4	416-D002	D95L-7559-A	Vacuum Pump Kit
Excursion	204_01B	Front Suspension — 4x4	211-003	T64P-3590-F	Steering Arm Remover
Excursion	204_01B	Front Suspension — 4x4	205-199	T83T-3132-A1	Driver
Excursion	204_01B	Front Suspension — 4x4	205-429		Knuckle Seal Installer
Excursion	204_01B	Front Suspension — 4x4	205-086	T74P-4635-C	Installer/Remover, C-Frame and Screw
Excursion	204_01B	Front Suspension — 4x4	204-358		Remover/Installer, Ball Joint
Excursion	204_020	Rear Suspension	211-023	T74P-3044-A1	C-Frame and Screw
Excursion	205_000	Driveline System — General Information	164-R2402		Anglemaster II Driveline Inclinator
Excursion	205_000	Driveline System — General Information	205-323	T92T-4851-D	Runout Gauge, Drive Pinion
Excursion	205_000	Driveline System — General Information	205-326	T92T-4851-G	Gauge, Drive Pinion Flange (Pin) 1350 U-joint size
Excursion	205_000	Driveline System — General Information	100-D002	D78P-4201-B	Dial Indicator Gauge with Holding Fixture
Excursion	205_000	Driveline System — General Information	100-F027	014-00344	Vibration Analyzer
Excursion	205_000	Driveline System — General Information	205-012	T57T-4851-B	Holding Fixture, Drive Pinion Flange
Excursion	205_000	Driveline System — General Information	205-453		Runout Gauge, Drive Pinion Flange
Excursion	205_000	Driveline System — General Information	205-454		Runout Pin, Drive Pinion Flange
Excursion	205_010	Driveshaft	205-086	T74P-4635-C	Installer/Remover, C-Frame and Screw
Excursion	205_010	Driveshaft	205-116	T77F-4220-B1	Remover, Differential Bearing
Excursion	205_010	Driveshaft	205-D014	D80L-630-3	Step Plate
Excursion	205_010	Driveshaft	205-343	T95P-3514-A	Installer, Constant Velocity Joint Boot Clamp
Excursion	205_010	Driveshaft	211-002	T63P-9171-A	Installer, Keystone Clamp
Excursion	205_02A	Rear Drive Axle/Differential — Dana 80	205-D044	D81T-4221-A	Installer, Differential Carrier Bearing
Excursion	205_02A	Rear Drive Axle/Differential — Dana 80	308-021	T75L-4201-A	Gauge, Clutch Housing

Excursion_Tools.xls

Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-D048	D81T-4222-ER	Set, Dummy Bearing
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-D019	D80L-630-8	Step Plate
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-D072	D97T-4221-A	2-Jaw Puller
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	100-001	T50T-100-A	Slide Hammer
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	307-001	TOOL-1175-AC	Remover, Bushing
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-285	T88T-4851-A	Installer, Drive Pinion Flange
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-126	T78P-4851-A	Companion Flange Holding Tool
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-D072	D97L-4221-A	2-Jaw Puller
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-430	Part of 205-S419	Collets, Differential Carrier Bearing
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-431	Part of 205-S419	Retaining Ring, Differential Carrier Bearing
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-432	Part of 205-S419	Step Plate, Differential Carrier Bearing
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	308-052	T77J-7025-B	Remover, Bearing Tube
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	308-092	T84T-7025-B	Removal Screw, Bearing Tube
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-487		Protector, Drive Pinion Thread
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-D055	D81L-4000-A	Handle
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-283	T88T-4628-A	Remover, Rear Wheel Hub Bearing Cup
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-489		Remover, Drive Pinion Inner Bearing
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-024	T67P-4616-A	Installer, Drive Pinion Bearing Cup
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-486		Installer, Drive Pinion Bearing Cup
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-098	T75T-1176-A	Drawbar, Rear Axle
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-281	T88T-4020-B	Adapter for 205-S127
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-160	T80T-4020-F43	Adapter for 205-S156
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-D028	D80T-4020-R60	Alignment Adapter
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-280	T88T-4020-A	Depth Gauge/Aligner, Drive Pinion
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-159	T80T-4020-F42	Adapter for 205-S156
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-D038	D81T-4020-F51	Gauge Tube
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-488		Installer, Drive Pinion Bearing
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-090	T75L-1165-B	Plate, Bearing/Oil Seal
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-284	T88T-4676-A	Installer, Rear Wheel Hub Oil Seal
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-001	TOOL-4000-E	Spreader, Differential Carrier
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	100-D002	D78P-4201-B	Dial Indicator Gauge with Holding Fixture
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-D026	D80L-1002-L	2-Jaw Puller
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-D064	D84L-1123-A	Puller, Bearing
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	205-S156	T80T-4020-A	Depth Gauge, Drive Pinion
Excursion	205_02A	Rear Drive Axle/Differential	— Dana 80	100-002	TOOL-4201-C	Dial Indicator Gauge with Holding Fixture
Excursion	205_02B	Rear Drive Axle/Differential	— Dana S110	014-00030		Wheel Dolly
Excursion	205_02B	Rear Drive Axle/Differential	— Dana S110	205-D064	D84L-1123-A	Puller, Bearing
Excursion	205_02B	Rear Drive Axle/Differential	— Dana S110	204-069	T81P-1104-C	Remover/Installer, Front Wheel Hub
Excursion	205_02B	Rear Drive Axle/Differential	— Dana S110	205-D020	D80L-630-9	Step Plate
Excursion	205_02B	Rear Drive Axle/Differential	— Dana S110	206-041	T89P-20202-A	Installer, Wheel Speed Sensor Ring

Excursion_Tools.xls

Excursion	205_02B	Rear Drive Axle/Differential — Dana S110	307-003	T57L-500-B	Holding Fixture, Transmission
Excursion	205_02B	Rear Drive Axle/Differential — Dana S110	205-S438		Installer, Drive Pinion Oil Seal
Excursion	205_02B	Rear Drive Axle/Differential — Dana S110	205-433		Remover, Yoke
Excursion	205_02C	Rear Drive Axle/Differential — Dana S135	014-00030		Wheel Dolly
Excursion	205_02C	Rear Drive Axle/Differential — Dana S135	205-D064	D84L-1123-A	Puller, Bearing
Excursion	205_02C	Rear Drive Axle/Differential — Dana S135	100-D008	D87L-1000-A	Lifting Sling (1" x 5')
Excursion	205_02C	Rear Drive Axle/Differential — Dana S135	205-S438		Installer, Drive Pinion Oil Seal
Excursion	205_02C	Rear Drive Axle/Differential — Dana S135	205-S434		Installer, Yoke
Excursion	205_02C	Rear Drive Axle/Differential — Dana S135	205-433		Remover, Yoke
Excursion	205_02D	Wheel Hubs and Bearings — Full Floating Axle — Dana	205-282	T88T-4252-A	Socket, Wheel Hub Nut (F-350 only)
Excursion	205_02D	Wheel Hubs and Bearings — Full Floating Axle — Dana	205-153	T80T-4000-W	Adapter for 303-224 (Handle)
Excursion	205_02D	Wheel Hubs and Bearings — Full Floating Axle — Dana	205-098	T75T-1176-A Dana 80	Drawbar, Rear Axle
Excursion	205_02D	Wheel Hubs and Bearings — Full Floating Axle — Dana	205-442	Dana S135	Installer, Wheel Hub Inner Bearing Cup
Excursion	205_02D	Wheel Hubs and Bearings — Full Floating Axle — Dana	205-444	Dana S135	Installer, Wheel Hub Outer Bearing Cup
Excursion	205_02D	Wheel Hubs and Bearings — Full Floating Axle — Dana	205-445	Dana S135	Installer, Wheel Hub Inner Oil Seal
Excursion	205_02D	Wheel Hubs and Bearings — Full Floating Axle — Dana	205-278	T88T-1175-C Dana 80	Installer, Rear Wheel Hub Bearing Cup
Excursion	205_02D	Wheel Hubs and Bearings — Full Floating Axle — Dana	205-441	Dana S135	Remover, Wheel Hub Inner Bearing Cup
Excursion	205_02D	Wheel Hubs and Bearings — Full Floating Axle — Dana	205-443	Dana S135	Remover, Wheel Hub Outer Bearing Cup
Excursion	205_02D	Wheel Hubs and Bearings — Full Floating Axle — Dana	205-275	T88T-1175-A Dana 80	Remover, Rear Wheel Hub Bearing Cup
Excursion	205_02D	Wheel Hubs and Bearings — Full Floating Axle — Dana	205-277	T88T-1175-B Dana 80	Remover, Rear Wheel Hub Bearing Cup
Excursion	205_02D	Wheel Hubs and Bearings — Full Floating Axle — Dana	205-100	T75T-1225-B	Installer, Rear Wheel Hub Bearing Cup
Excursion	205_02E	Rear Drive Axle/Differential — Ford 10.50-Inch Ring Gear	100-002	TOOL-4201-C	Dial Indicator Gauge with Holding Fixture
Excursion	205_02E	Rear Drive Axle/Differential — Ford 10.50-Inch Ring Gear	205-D026	D80L-1002-L	2-Jaw Puller
Excursion	205_02E	Rear Drive Axle/Differential — Ford 10.50-Inch Ring Gear	205-233	T85T-4851-AH	Installer, Drive Pinion Flange
Excursion	205_02E	Rear Drive Axle/Differential — Ford 10.50-Inch Ring Gear	205-012	T57T-4851-B	Holding Fixture, Drive Pinion Flange
Excursion	205_02E	Rear Drive Axle/Differential — Ford 10.50-Inch Ring Gear	205-208	T83T-4676-A	Installer, Drive Pinion Oil Seal
Excursion	205_02E	Rear Drive Axle/Differential — Ford 10.50-Inch Ring Gear	205-226	T85T-4020-AH1	Depth Gauge/Aligner, Drive Pinion
Excursion	205_02E	Rear Drive Axle/Differential — Ford 10.50-Inch Ring Gear	205-D049	D81T-4616-A	Remover/Installer, Bearing Cup
Excursion	205_02E	Rear Drive Axle/Differential — Ford 10.50-Inch Ring Gear	205-D064	D84L-1123-A	Puller, Bearing
Excursion	205_02E	Rear Drive Axle/Differential — Ford 10.50-Inch Ring Gear	205-090	T75L-1165-B	Plate, Bearing/Oil Seal
Excursion	205_02E	Rear Drive Axle/Differential — Ford 10.50-Inch Ring Gear	205-126	T78P-4851-A	Holding Fixture, Drive Pinion Flange
Excursion	205_02E	Rear Drive Axle/Differential — Ford 10.50-Inch Ring Gear	205-159	T80T-4020-F42	Adapter for 205-S156
Excursion	205_02E	Rear Drive Axle/Differential — Ford 10.50-Inch Ring Gear	205-423		Depth Gauge, Drive Pinion (10 1/2-inch)
Excursion	205_02E	Rear Drive Axle/Differential — Ford 10.50-Inch Ring Gear	205-D038	D81T-4020-F51	Gauge Tube
Excursion	205_02E	Rear Drive Axle/Differential — Ford 10.50-Inch Ring Gear	205-111	T76P-4020-A11	Adapter for 205-S127
Excursion	205_02E	Rear Drive Axle/Differential — Ford 10.50-Inch Ring Gear	205-D055	D81L-4000-A	Handle (Long)
Excursion	205_02E	Rear Drive Axle/Differential — Ford 10.50-Inch Ring Gear	205-153	T80T-4000-W	Adapter for 303-224 (Handle)
Excursion	205_02E	Rear Drive Axle/Differential — Ford 10.50-Inch Ring Gear	205-232	T85T-4621-AH	Installer, Drive Pinion Bearing
Excursion	205_02E	Rear Drive Axle/Differential — Ford 10.50-Inch Ring Gear	205-231	T85T-4616-AH	Installer, Drive Pinion Bearing
Excursion	205_02E	Rear Drive Axle/Differential — Ford 10.50-Inch Ring Gear	205-229	T85T-4209-AH	Protector, Drive Pinion Thread

Excursion_Tools.xls

Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	205-098	T75T-1176-A	Drawbar, Rear Axle
Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	205-160	T80T-4020-F43	Adapter for 205-S156
Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	205-D044	D81T-4221-A	Installer, Differential Carrier Bearing
Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	205-S419	Forcing Screw	Remover, Differential Carrier Bearing
Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	205-228	T85T-4067-AH	Installer, Differential Shim
Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	205-430	Part of 205-S419	Collets, Differential Carrier Bearing
Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	205-431	Part of 205-S419	Retaining Ring, Differential Carrier Bearing
Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	205-432	Part of 205-S419	Step Plate, Differential Carrier Bearing
Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	205-D072	D97L-4221-A	2-Jaw Puller
Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	205-451		Remover, Drive Pinion Inner Bearing Cup
Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	205-452		Remover, Drive Pinion Outer Bearing Cup
Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	308-052	T77J-7025-B	Remover, Bearing Tube
Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	308-092	T84T-7025-B	Removal Screw, Bearing Tube
Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	205-447		Preload Gauge, Differential Clutch
Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	303-D027	D81L-4201-A	Feeler Gauge Set
Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	205-246	T86T-4205-A	Rotator, Differential
Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	205-DS059	D83T-4205-C	Rotator, Limited Slip Differential
Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	205-D019	D80L-630-8	Step Plate
Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	205-135	T80P-4946-A	Gauge, Differential Clutch
Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	205-380	T97T-4946-B	Gauge, Differential (Traction-Lok)
Excursion	205_02E	Rear Drive Axle/Differential — Ford	10.50-Inch Ring Gear	205-446		Preload Gauge, Differential Clutch
Excursion	205_02F	Wheel Hubs and Bearings — Full Floating Axle — Ford		308-163	T88C-77000-FH	Installer, Differential Bearing Cup
Excursion	205_02F	Wheel Hubs and Bearings — Full Floating Axle — Ford		205-153	T80T-4000-W	Adapter for 303-224 (Handle)
Excursion	205_02F	Wheel Hubs and Bearings — Full Floating Axle — Ford		205-100	T75T-1225-B	Installer, Axle Bearing
Excursion	205_02F	Wheel Hubs and Bearings — Full Floating Axle — Ford		205-422		Installer, Wheel Hub Oil Seal (10 1/2")
Excursion	205_02F	Wheel Hubs and Bearings — Full Floating Axle — Ford		205-421		Remover, Wheel Hub Inner Bearing Cup (10 1/2")
Excursion	205_02F	Wheel Hubs and Bearings — Full Floating Axle — Ford		205-099	T75T-1225-A	Installer, Axle Bearing
Excursion	205_02F	Wheel Hubs and Bearings — Full Floating Axle — Ford		205-420		Remover, Wheel Hub Outer Bearing Cup (10 1/2")
Excursion	205_02F	Wheel Hubs and Bearings — Full Floating Axle — Ford		205-D026	D80L-1002-L	2-Jaw Puller
Excursion	205_02F	Wheel Hubs and Bearings — Full Floating Axle — Ford		205-448		Socket, Ford Axle Locknut
Excursion	205_02F	Wheel Hubs and Bearings — Full Floating Axle — Ford		205-D018	D80L-630-7	Step Plate
Excursion	205_030	Front Drive Axle/Differential		303-D104	D94T-9000-A	Oil Suction Gun
Excursion	205_030	Front Drive Axle/Differential		205-012	T57T-4851-B	Holding Fixture, Drive Pinion Flange
Excursion	205_030	Front Drive Axle/Differential		307-001	TOOL-1175-AC	Remover, Bushing
Excursion	205_030	Front Drive Axle/Differential		205-018	T65L-4851-B	Remover, Drive Pinion Flange
Excursion	205_030	Front Drive Axle/Differential		100-001	T50T-100-A	Slide Hammer
Excursion	205_030	Front Drive Axle/Differential		205-199	T83T-3132-A1	Driver
Excursion	205_030	Front Drive Axle/Differential		205-429		Knuckle Seal Installer
Excursion	205_030	Front Drive Axle/Differential		205-158	T80T-4020-F41	Adapter for 205-S156
Excursion	205_030	Front Drive Axle/Differential		205-S156	T80T-4020-A	Depth Gauge, Drive Pinion

Excursion_Tools.xls

Excursion	205_030	Front Drive Axle/Differential	100-D002	D78P-4201-B	Dial Indicator Gauge with Holding Fixture
Excursion	205_030	Front Drive Axle/Differential	205-098	T75T-1176-A	DrawBar, Rear Axle
Excursion	205_030	Front Drive Axle/Differential	308-021	T75L-4201-A	Gauge, Clutch Housing
Excursion	205_030	Front Drive Axle/Differential	205-D055	D81L-4000-A	Handle
Excursion	205_030	Front Drive Axle/Differential	205-142	T80T-4000-J	Installer, Differential Bearing Cone
Excursion	205_030	Front Drive Axle/Differential	205-139	T80T-4000-E	Installer, Drive Pinion Bearing Cup
Excursion	205_030	Front Drive Axle/Differential	205-140	T80T-4000-F	Installer, Drive Pinion Bearing Cup
Excursion	205_030	Front Drive Axle/Differential	205-D036	D81L-4220-A	Puller, Drive Pinion/Differential Carrier
Excursion	205_030	Front Drive Axle/Differential	205-090	T75L-1165-B	Plate, Bearing Oil Seal
Excursion	205_030	Front Drive Axle/Differential	205-092	T75L-1165-DA	Installer, Rear Axle Bearing/Oil Seal
Excursion	205_030	Front Drive Axle/Differential	100-002	TOOL-4201-C	Dial Indicator Gauge with Holding Fixture
Excursion	205_030	Front Drive Axle/Differential	205-001	TOOL-4000-E	Spreader, Differential Carrier
Excursion	205_030	Front Drive Axle/Differential	205-D033	D80T-4020-F48	Gauge Tube
Excursion	205_030	Front Drive Axle/Differential	205-D044	D81T-4221-A	Installer, Differential Carrier Bearing
Excursion	205_030	Front Drive Axle/Differential	205-004	T53T-4621-B	Installer, Drive Pinion Bearing Cone
Excursion	205_030	Front Drive Axle/Differential	205-006	T56T-4616-B	Installer, Drive Pinion Bearing Cup
Excursion	205_030	Front Drive Axle/Differential	205-425		Installer, LH Differential Carrier Oil Seal
Excursion	205_030	Front Drive Axle/Differential	205-427		Installer, LH Differential Carrier Oil Seal
Excursion	205_030	Front Drive Axle/Differential	205-424		Installer, RH Differential Carrier Oil Seal
Excursion	205_030	Front Drive Axle/Differential	205-426		Installer, RH Differential Carrier Oil Seal
Excursion	205_030	Front Drive Axle/Differential	205-D051	D81T-4628-A	Remover/Installer, Bearing Cup
Excursion	205_030	Front Drive Axle/Differential	205-D054	D81T-4628-D	Remover/Installer, Bearing Cup
Excursion	205_030	Front Drive Axle/Differential	205-D046	D81T-4222-C	Set, Dummy Bearing
Excursion	205_030	Front Drive Axle/Differential	205-D047	D81T-4222-DR	Set, Dummy Bearing
Excursion	205_030	Front Drive Axle/Differential	205-428		Spreader Bar, Oil Seal
Excursion	205_030	Front Drive Axle/Differential	205-D016	D80L-630-5	Step Plate
Excursion	205_030	Front Drive Axle/Differential	205-D018	D80L-630-7	Step Plate
Excursion	206_000	Brake System — General Information	105-R0057		73III Automotive Meter
Excursion	206_000	Brake System — General Information	201-00002		On-Car Brake Lathe
Excursion	206_050	Parking Brake and Actuation	206-D002	D81L-1103-A	Brake Adjusting Gauge
Excursion	206_090	Anti-Lock Control — 4-Wheel	105-R0057		73III Automotive Meter
Excursion	206_090	Anti-Lock Control — 4-Wheel	105-R0053		Rotunda 88 Digital Multimeter
Excursion	206_090	Anti-Lock Control — 4-Wheel	418-063	T97P-50ALA	ABS Adapter Cable
Excursion	206_090	Anti-Lock Control — 4-Wheel	418-005	014-00322, T83L-50000-000EEC-IV	Breakout Box, EEC-IV Control System
Excursion	206_090	Anti-Lock Control — 4-Wheel	205-D027	D80L-1013-A	2-3 Jaw Puller
Excursion	206_090	Anti-Lock Control — 4-Wheel	205-DS011	D80L-630-A	Step Plate Adapter Set
Excursion	211_000	Steering System — General Information	023-R0007		Dial Thermometer 0-220°F
Excursion	211_000	Steering System — General Information	105-R0057		73III Automotive Meter

Excursion_Tools.xls

Excursion	211_000	Steering System — General Information	211-F001	014-00207	Power Steering Analyzer
Excursion	211_000	Steering System — General Information	211-034	T74P-3504-Y	Gauge, Spring Tension
Excursion	211_000	Steering System — General Information	418-F102	007-00061	DIS/EDIS Tach Adapter
Excursion	211_000	Steering System — General Information	211-003	T64-3590F	Steering Arm Remover
Excursion	211_000	Steering System — General Information	416-D002	D95L-7559-A	Vacuum Pump Kit
Excursion	211_000	Steering System — General Information	211-265		Evacuation Cap, Power Steering
Excursion	211_000	Steering System — General Information	211-327		Fill Adapter Manifold, Power Steering
Excursion	211_020	Power Steering	211-016	T69L-10300-B	Remover, Power Steering Pump Pulley
Excursion	211_020	Power Steering	211-185	T91P-3A733-A	Installer, Power Steering Pump Pulley
Excursion	211_020	Power Steering	211-D027	D90P-3517-A	Installer Set, Teflon® Seal
Excursion	211_020	Power Steering	211-003	T64P-3590-F	Remover, Steering Arm
Excursion	211_020	Power Steering	211-012	T66P-3553-B	Installer, Worm Bearing Locknut
Excursion	211_020	Power Steering	307-003	T57L-500-B	Holding Fixture, Transmission
Excursion	211_020	Power Steering	211-S005	T65P-3524-A	Service Set, Steering Gear Bearing and Oil Seal
Excursion	211_020	Power Steering	308-001	T58L-101-B	Remover, Pilot Bearing
Excursion	211_020	Power Steering	211-044	T77L-3576-A	Installer, Sector Shaft Seal
Excursion	211_030	Steering Linkage	211-003	T64P-3590-F	Steering Arm Remover
Excursion	211_040	Steering Column	418-F088	105-R0012	Diagnostic Tool, Restraint System (2 Req'd)
Excursion	211_040	Steering Column	418-133	40-009	Diagnostic Tool, Restraint System (2 Req'd)
Excursion	211_040	Steering Column	205-116	T77F-4220-B1	Remover, Differential Bearing
Excursion	211_040	Steering Column			Steering Column Locking Lever Tool (Shop Fabricated)
Excursion	211_050	Steering Column Switches	105-R0057		73III Automotive Meter
Excursion	303_000	Engine System — General Information			Commercially Available Leakdown Tester
Excursion	303_000	Engine System — General Information	134-R0212		Quick Disconnect Compression Tester
Excursion	303_000	Engine System — General Information	303-007	TOOL-6565-AB	Dial Indicator Gauge Adapter
Excursion	303_000	Engine System — General Information	014-00708		Engine Cylinder Leak Detection/Air Pressurization Kit
Excursion	303_000	Engine System — General Information	303-088	T73L-6600-A	Oil Pressure Gauge
Excursion	303_000	Engine System — General Information	164-R0756		UV Leak Detector Kit
Excursion	303_000	Engine System — General Information	164-R0253		Vacuum/Pressure Tester
Excursion	303_000	Engine System — General Information	303-D031	D81L-6002-B	Plastigage
Excursion	303_000	Engine System — General Information	303-D033	D81L-6002-D	Scraper, Piston Ring Groove
Excursion	303_000	Engine System — General Information	100-002	TOOL-4201-C	Dial Indicator Gauge with Holding Fixture
Excursion	303_000	Engine System — General Information	303-004	TOOL-6505-E	Clearance Gauge, Valve Guide
Excursion	303_000	Engine System — General Information	303-006	TOOL-6513-DD	Pressure Gauge, Valve/Clutch Spring
Excursion	303_000	Engine System — General Information	100-001	T50T-100-A	Slide Hammer
Excursion	303_000	Engine System — General Information	303-D039	D83L-4201-A	Straight Edge
Excursion	303_01A	Engine — 5.4L (2V)	303-009	T58P-6316-D	Remover, Crankshaft Vibration Damper
Excursion	303_01A	Engine — 5.4L (2V)	303-102	T74P-6316-B	Installer, Crankshaft Vibration Damper
Excursion	303_01A	Engine — 5.4L (2V)	303-335	T88T-6701-A	Installer, Front Cover Oil Seal
Excursion	303_01A	Engine — 5.4L (2V)	303-107	T74P-6700-A	Remover, Crankshaft Front Oil Seal

Excursion_Tools.xls

Excursion	303_01A	Engine — 5.4L (2V)	303-635		Installer, Crankshaft Front Oil Seal
Excursion	303_01A	Engine — 5.4L (2V)	303-448	T93P-6303-A	Holding Tool, Crankshaft
Excursion	303_01A	Engine — 5.4L (2V)	303-557	T96T-6256-B	Aligner, Camshaft Position
Excursion	303_01A	Engine — 5.4L (2V)	303-S568	T96T-6256-AR	Alignment Set, Camshaft
Excursion	303_01A	Engine — 5.4L (2V)	303-567	T97P-6565-AH	Compressor, Valve Spring
Excursion	303_01A	Engine — 5.4L (2V)	303-382	T91P-6565-AH	Compressor Spacer, Valve Spring
Excursion	303_01A	Engine — 5.4L (2V)	303-383	T91P-6571-A	Installer, Valve Stem Oil Seal
Excursion	303_01A	Engine — 5.4L (2V)	303-F070		Heavy Duty Engine Support
Excursion	303_01A	Engine — 5.4L (2V)	014-00942		High Lift Transmission Jack
Excursion	303_01A	Engine — 5.4L (2V)	303-239	T84T-6312-C	Holding Wrench, Fan Pulley
Excursion	303_01A	Engine — 5.4L (2V)	303-240	T84T-6312-D	Wrench, Fan Clutch Nut
Excursion	303_01A	Engine — 5.4L (2V)	303-639		Support Bracket, Engine
Excursion	303_01A	Engine — 5.4L (2V)	303-518	T95P-6701-DH	Installer, Crankshaft Rear Oil Seal
Excursion	303_01A	Engine — 5.4L (2V)	303-516	T95P-6701-BH	Installer, Crankshaft Rear Oil Seal
Excursion	303_01A	Engine — 5.4L (2V)	303-514	T95P-6701-AH	Remover, Crankshaft Rear Oil Slinger
Excursion	303_01A	Engine — 5.4L (2V)	303-517	T95P-6701-CH	Installer, Crankshaft Rear Oil Slinger
Excursion	303_01A	Engine — 5.4L (2V)	100-001	T50T-100-A	Slide Hammer
Excursion	303_01A	Engine — 5.4L (2V)	303-F047	014-00073	Modular Engine Lift Bracket
Excursion	303_01A	Engine — 5.4L (2V)	303-572	T97T-6000-A	Remover/Installer, Cylinder Head
Excursion	303_01A	Engine — 5.4L (2V)	303-DS086	D93P-6001-A	Lifting Bracket Set, Engine
Excursion	303_01A	Engine — 5.4L (2V)	303-442	T93P-6136-A	Guides, Connecting Rod
Excursion	303_01A	Engine — 5.4L (2V)	303-519	T95P-6701-EH	Remover, Crankshaft Rear Oil Seal
Excursion	303_01A	Engine — 5.4L (2V)	303-D055	D85L-6000-A	Strap Wrench
Excursion	303_01A	Engine — 5.4L (2V)	303-D032	D81L-6002-C	Compressor, Piston Ring
Excursion	303_01B	Engine — 6.8L	303-F070		Heavy Duty Engine Bracket
Excursion	303_01B	Engine — 6.8L	303-009	T58P-6316-D	Remover, Crankshaft Vibration Damper
Excursion	303_01B	Engine — 6.8L	303-102	T74P-6316-B	Installer, Crankshaft Vibration Damper
Excursion	303_01B	Engine — 6.8L	303-335	T88T-6701-A	Installer, Crankshaft Front Seal
Excursion	303_01B	Engine — 6.8L	303-107	T74P-6700-A	Remover, Crankshaft Front Seal
Excursion	303_01B	Engine — 6.8L	303-635		Installer, Crankshaft Front Seal
Excursion	303_01B	Engine — 6.8L	303-448	T93P-6303-A	Holding Tool, Crankshaft
Excursion	303_01B	Engine — 6.8L	303-557	T96T-6256-B	Aligner, Camshaft Position
Excursion	303_01B	Engine — 6.8L	303-567	T97P-6565-AH	Compressor, Valve Spring
Excursion	303_01B	Engine — 6.8L	303-F070		Heavy Duty Engine Support
Excursion	303_01B	Engine — 6.8L	303-639		Support Bracket, Engine
Excursion	303_01B	Engine — 6.8L	303-478	T94T-6312-AH	Holding Wrench, Fan Pulley
Excursion	303_01B	Engine — 6.8L	303-214	T83T-6312-B	Wrench, Fan Clutch Nut
Excursion	303_01B	Engine — 6.8L	014-00942		Transmission Jack
Excursion	303_01B	Engine — 6.8L	303-518	T95P-6701-DH	Installer, Crankshaft Rear Seal
Excursion	303_01B	Engine — 6.8L	303-519	T95P-6701-EH	Remover, Crankshaft Rear Seal

Excursion_Tools.xls

Excursion	303_01B	Engine — 6.8L	303-516	T95P-6701-BH	Installer, Crankshaft Rear Seal
Excursion	303_01B	Engine — 6.8L	303-514	T95P-6701-AH	Remover, Crankshaft Rear Oil Slinger
Excursion	303_01B	Engine — 6.8L	303-517	T95P-6701-CH	Installer, Crankshaft Rear Oil Slinger
Excursion	303_01B	Engine — 6.8L	100-001	T50T-100-A	Slide Hammer
Excursion	303_01B	Engine — 6.8L	303-572	T97T-6000-A	Remover/Installer, Cylinder Head
Excursion	303_01B	Engine — 6.8L	303-F047	014-00073	Modular Engine Lift Bracket
Excursion	303_01B	Engine — 6.8L	303-442	T93P-6136-A	Guides, Connecting Rod
Excursion	303_01B	Engine — 6.8L	303-381	T91P-6565-AH	Compressor, Valve Spring
Excursion	303_01B	Engine — 6.8L	303-383	T91P-6571-A	Installer, Valve Stem Oil Seal
Excursion	303_01B	Engine — 6.8L	303-D032	D81L-6002-C	Piston Ring Compressor
Excursion	303_01B	Engine — 6.8L	303-D055	D85L-6000-A	Strap Wrench
Excursion	303_01C	Engine — 6.0L Diesel	303-D027	D81L-4201-A	Feeler Gauge
Excursion	303_01C	Engine — 6.0L Diesel	100-002	TOOL-4201-C	Dial Indicator and Bracketry
Excursion	303_01C	Engine — 6.0L Diesel	303-770		Installer, Crankshaft Rear Seal and Wear Ring
Excursion	303_01C	Engine — 6.0L Diesel	303-771		Remover, Crankcase Rear Seal and Wear Sleeve
Excursion	303_01C	Engine — 6.0L Diesel	100-001		Slide Hammer
Excursion	303_01C	Engine — 6.0L Diesel	303-759		Lifting Bracket, Cylinder Head
Excursion	303_01C	Engine — 6.0L Diesel	014-00071		Heavy Duty Floor Crane
Excursion	303_01C	Engine — 6.0L Diesel	303-625		Quick Disconnect Tool
Excursion	303_01C	Engine — 6.0L Diesel	303-755		Disconnect Tool, Quick Release Coupling
Excursion	303_01C	Engine — 6.0L Diesel	303-761		Installer, Crankshaft Front Seal and Wear Sleeve
Excursion	303_01C	Engine — 6.0L Diesel	303-762		Remover, Crankshaft Front Wear Sleeve
Excursion	303_01C	Engine — 6.0L Diesel	303-D060		Oil Seal Remover
Excursion	303_01C	Engine — 6.0L Diesel	303-F070		3-Bar Engine Support
Excursion	303_01C	Engine — 6.0L Diesel	303-D030		Lifting Eyes
Excursion	303_01C	Engine — 6.0L Diesel	303-591		Wrench, Fan Clutch Nut
Excursion	303_01C	Engine — 6.0L Diesel	014-00072		Heavy Duty Floor Crane
Excursion	303_01C	Engine — 6.0L Diesel	303-050		Lifting Bracket, Engine
Excursion	303_01C	Engine — 6.0L Diesel	303-D043	D83T-6000-B	Diesel Engine Lifting Bracket
Excursion	303_01C	Engine — 6.0L Diesel	310-S039	T90T-9550-S	Fuel Line Tool
Excursion	303_01C	Engine — 6.0L Diesel	303-D043-02		Adapter for 303-D043
Excursion	303_01C	Engine — 6.0L Diesel	303-D043-01		Adapter for 303-D043
Excursion	303_01C	Engine — 6.0L Diesel	303-017	T65L-6250-A	Service Set, Camshaft
Excursion	303_01C	Engine — 6.0L Diesel	100-002	D78P-4201-B	Dial Indicator with Bracketry
Excursion	303_01C	Engine — 6.0L Diesel	303-772		Alignment Tool, Camshaft
Excursion	303_01C	Engine — 6.0L Diesel	303-D032	D81L-6002-C	Piston Ring Compressor
Excursion	303_01C	Engine — 6.0L Diesel	303-D031		Plastigage® B (D81L-6002-C)
Excursion	303_030	Engine Cooling	014-R1072		Pressure Test Kit
Excursion	303_030	Engine Cooling	105-R0051		Rotunda 73 Digital Multimeter
Excursion	303_030	Engine Cooling	014-R1060		Battery/Anti-Freeze Tester

Excursion_Tools.xls

Excursion	303_030	Engine Cooling	078-00497		RADKITPLUS
Excursion	303_030	Engine Cooling	164-R3658		Flush Kit Hardware Package
Excursion	303_030	Engine Cooling	164-R3662		Drain Kit
Excursion	303_030	Engine Cooling	303-591		Wrench, Fan Clutch Nut
Excursion	303_030	Engine Cooling	303-239	T84T-6312-C	Fan Pulley Holding Wrench (5.4L)
Excursion	303_030	Engine Cooling	303-240	T84T-6312-D	Fan Clutch Nut Wrench (5.4L)
Excursion	303_030	Engine Cooling	303-478	T94T-6312-AH	Fan Pulley Holding Wrench (6.8L and 7.3L)
Excursion	303_030	Engine Cooling	303-214	T83T-6312-B	Fan Clutch Nut Wrench (6.8L and 7.3L)
Excursion	303_04A	Fuel Charging and Controls — 5.4L (2V)	310-D004	D87L-9280-A	Spring Lock Coupling Disconnect Tool (3/8-Inch)
Excursion	303_04A	Fuel Charging and Controls — 5.4L (2V)	310-D005	D87L-9280-B	Spring Lock Coupling Disconnect Tool (1/2-Inch)
Excursion	303_04C	Fuel Charging and Controls — 6.0L Diesel	303-625		Quick Disconnect Tool
Excursion	303_04C	Fuel Charging and Controls — 6.0L Diesel	303-755		Disconnect Tool, Quick Release Coupling
Excursion	303_04C	Fuel Charging and Controls — 6.0L Diesel	303-769		Socket, Fuel Injector Pressure Regulator Valve
Excursion	303_04C	Fuel Charging and Controls — 6.0L Diesel	100-002	TOOL-4201-C	Dial Indicator with Bracketry
Excursion	303_04C	Fuel Charging and Controls — 6.0L Diesel	100-001	T50T-100-A	Impact Slide Hammer
Excursion	303_04C	Fuel Charging and Controls — 6.0L Diesel	303-DS110	D94T-9000-D	Injector Sleeve Brush Set
Excursion	303_04C	Fuel Charging and Controls — 6.0L Diesel	303-768		Remover, Fuel Injector Sleeve
Excursion	303_04C	Fuel Charging and Controls — 6.0L Diesel	303-767		Installer, Fuel Injector Sleeve
Excursion	303_04D	Fuel Charging and Controls — Turbocharger	303-755		Disconnect Tool, Quick-Release Coupling
Excursion	303_06A	Starting System — Gasoline Engines	105-R0057		73III Automotive Meter
Excursion	303_06A	Starting System — Gasoline Engines	010-00735		ARBST Battery and Electrical System Tester
Excursion	303_06B	Starting System — Diesel Engine	105-R0057		73III Automotive Meter
Excursion	303_06B	Starting System — Diesel Engine	010-00735		ARBST Battery and Electrical System Tester
Excursion	303_07B	Glow Plug System	303-764		Remover, Glow Plug Sleeve
Excursion	303_07B	Glow Plug System	303-763		Installer, Glow Plug Sleeve
Excursion	303_080	Engine Emission Control	303-760		Remover, EGR Valve
Excursion	303_130	Evaporative Emissions	310-F007	134-00056	Evaporative Emission System Leak Tester
Excursion	303_14A	Electronic Engine Controls — Gasoline Engines	303-476	T94P-9472-A	Socket, Exhaust Gas Oxygen Sensor
Excursion	307_01A	Automatic Transmission — 4R100	164-R0756		UV Leak Detector Kit
Excursion	307_01A	Automatic Transmission — 4R100	307-004	T57L-77820-A	Transmission Fluid Pressure Gauge
Excursion	307_01A	Automatic Transmission — 4R100	105-R0057		Automotive Meter 73III
Excursion	307_01A	Automatic Transmission — 4R100	418-F037	007-00107	E4OD Transmission Cable
Excursion	307_01A	Automatic Transmission — 4R100	418-049	T94L-50-EEC-V	Breakout Box, EEC-V Control System
Excursion	307_01A	Automatic Transmission — 4R100	307-F016	007-00130	Transmission Tester
Excursion	307_01A	Automatic Transmission — 4R100	307-351	T97L-70010-A	Alignment Gauge, TR Sensor
Excursion	307_01A	Automatic Transmission — 4R100	418-F107	007-00111	MLP-TR Cable
Excursion	307_01A	Automatic Transmission — 4R100	007-00131		Trans Tester TR/MLP Overlay and Manual
Excursion	307_01A	Automatic Transmission — 4R100	418 F107	007-00111	MLP-TR Cable
Excursion	307_01A	Automatic Transmission — 4R100	211-00018		Automatic Transmission Flush and Fill Machine
Excursion	307_01A	Automatic Transmission — 4R100	199-00010		Automatic Transmission Flush and Fill Machine

Excursion_Tools.xls

Excursion	307_01A	Automatic Transmission — 4R100	100-001	T50T-100-A	Slide Hammer
Excursion	307_01A	Automatic Transmission — 4R100	307-013	T61L-7657-B	Installer, Transmission Extension Housing Fluid Seal
Excursion	307_01A	Automatic Transmission — 4R100	307-048	T74P-77248-A	Remover Transmission Fluid Seal
Excursion	307_01A	Automatic Transmission — 4R100	307-063	T77L-7697-C	Installer, Transmission Extension Housing Bushing
Excursion	307_01A	Automatic Transmission — 4R100	307-380		Installer, Output Shaft Fluid Seal
Excursion	307_01A	Automatic Transmission — 4R100	307-381		Installer, Output Shaft Bushing
Excursion	307_01A	Automatic Transmission — 4R100	307-064	T77L-7697-D	Remover Transmission Extension Housing Bushing
Excursion	307_01A	Automatic Transmission — 4R100	307-382		Remover, Output Shaft Bushing
Excursion	307_01A	Automatic Transmission — 4R100	211-S060	T78P-3504-N	Roll Pin Set
Excursion	307_01A	Automatic Transmission — 4R100	308-001	T58L-101-B	Remover, Pilot Bearing
Excursion	307_01A	Automatic Transmission — 4R100	307-050	T74P-77498-A	Installer, Shift Shaft Fluid Seal
Excursion	307_01A	Automatic Transmission — 4R100	307-351	T97P-70010-A	Alignment Gauge, TR Sensor
Excursion	307_01A	Automatic Transmission — 4R100	307-346	T97T-7902-A	Retainer, Torque Converter
Excursion	307_01A	Automatic Transmission — 4R100	307-005	T59L-100-B	Slide Hammer
Excursion	307_01A	Automatic Transmission — 4R100	307-221	T89T-70010-A	Remover, Transmission Fluid Pump
Excursion	307_01A	Automatic Transmission — 4R100	307-S383		Loading Fixture, Clutch
Excursion	307_01A	Automatic Transmission — 4R100	307-436	T89T-70010-E	Installer, Transmission Forward Clutch Assembly
Excursion	307_01A	Automatic Transmission — 4R100	307-359		Aligner, Valve Body
Excursion	307_01A	Automatic Transmission — 4R100	307-014	T63L-77837-A	Installer, Front Pump Fluid Seal
Excursion	307_01A	Automatic Transmission — 4R100	307-D004	D89L-77000-A	Banding Tool, Transmission Pump
Excursion	307_01A	Automatic Transmission — 4R100	307-001	TOOL-1175-AC	Remover, Bushing
Excursion	307_01A	Automatic Transmission — 4R100	303-D026	D80P-4201-A	Depth Micrometer
Excursion	307_01A	Automatic Transmission — 4R100	204-029	T77F-1176-A	Drawbar, (Heavy Duty Threaded)
Excursion	307_01A	Automatic Transmission — 4R100	307-258	T92T-77110-AH	Installer, Transmission Extension Housing Bushing
Excursion	307_01A	Automatic Transmission — 4R100	303-F053	014-00752	Oil Flusher Cooler Kit
Excursion	307_01A	Automatic Transmission — 4R100	307-015	T65L-77515-A	Compressor, Clutch Spring
Excursion	307_01A	Automatic Transmission — 4R100	307-387		Protector, Clutch Piston Seal
Excursion	307_01A	Automatic Transmission — 4R100	100-010	T71P-19703-C	Remover, O-Ring Seal
Excursion	307_01A	Automatic Transmission — 4R100	307-192	T88C-77000-AH2	Compressor Plate, Clutch Spring
Excursion	307_01A	Automatic Transmission — 4R100	307-225	T89T-70010-C2	Compressor Plate, Clutch Spring
Excursion	307_01A	Automatic Transmission — 4R100	307-228	T89T-70010-F	Compressor Plate, Clutch Spring
Excursion	307_01A	Automatic Transmission — 4R100	307-068	T77L-77548-A	Protector, Piston Seal
Excursion	307_01A	Automatic Transmission — 4R100	308-025	T75L-7025-C	Remover/Installer, Bearing Tube
Excursion	307_01A	Automatic Transmission — 4R100	307-388		Spacer, Output Shaft Speed Sensor
Excursion	307_01A	Automatic Transmission — 4R100	307-091	T81P-7902-C	Handle, Torque Converter
Excursion	307_01A	Automatic Transmission — 4R100	307-222	T89T-70010-B	Aligner, Transmission Fluid Pump
Excursion	307_01A	Automatic Transmission — 4R100	307-376		Installer, Fluid Filler Tube
Excursion	307_01A	Automatic Transmission — 4R100	307-381		Installer, Output Shaft Bushing
Excursion	307_01A	Automatic Transmission — 4R100	307-436		Installer, Transmission Forward Clutch Assembly
Excursion	307_01A	Automatic Transmission — 4R100	307-S223	T89T-70010-C	Service Set, Clutch Spring

Excursion_Tools.xls

Excursion	307_01B	Automatic Transmission — TorqShift	164-R0756		UV Leak Detector Kit
Excursion	307_01B	Automatic Transmission — TorqShift	307-004	T57L-77820-A	Transmission Fluid Pressure Gauge
Excursion	307_01B	Automatic Transmission — TorqShift	105-R0057		73III Automotive Meter
Excursion	307_01B	Automatic Transmission — TorqShift	307-457		Air Test Plate
Excursion	307_01B	Automatic Transmission — TorqShift	307-126	T82P-7006-C	Test Plate Screw Set, Transmission
Excursion	307_01B	Automatic Transmission — TorqShift	211-00018		Automatic Transmission Flush and Fill Machine
Excursion	307_01B	Automatic Transmission — TorqShift	199-00010		Automatic Transmission Flush and Fill Machine
Excursion	307_01B	Automatic Transmission — TorqShift	307-456		Alignment Pins, Pump
Excursion	307_01B	Automatic Transmission — TorqShift	100-001	T50T-100-A	Slide Hammer
Excursion	307_01B	Automatic Transmission — TorqShift	205-153	T80T-4000-W	Handle
Excursion	307_01B	Automatic Transmission — TorqShift	307-462		Installer, Transmission Extension Housing Fluid Seal (4x2)
Excursion	307_01B	Automatic Transmission — TorqShift	307-463		Remover, Transmission Extension Housing Bushing
Excursion	307_01B	Automatic Transmission — TorqShift	307-464		Installer, Transmission Extension Housing Bushing
Excursion	307_01B	Automatic Transmission — TorqShift	307-453		Installer, Transmission Extension Housing Fluid Seal (4x4)
Excursion	307_01B	Automatic Transmission — TorqShift	307-309	T94P-77001-A	Remover, Transmission Fluid Seal
Excursion	307_01B	Automatic Transmission — TorqShift	307-454		Legs (used with 307-309)
Excursion	307_01B	Automatic Transmission — TorqShift	307-458		Nut Driver, Output Shaft
Excursion	307_01B	Automatic Transmission — TorqShift	211-S060	T78P-3504-N	Roll Pin Set
Excursion	307_01B	Automatic Transmission — TorqShift	307-002	TOOL-77288	Installer, Shift Shaft Fluid Seal
Excursion	307_01B	Automatic Transmission — TorqShift	307-346	T97T-7902-A	Retainer, Torque Converter
Excursion	307_01B	Automatic Transmission — TorqShift	307-015	T65L-77515-A	Compressor, Clutch Spring
Excursion	307_01B	Automatic Transmission — TorqShift	307-455		Alignment Cone
Excursion	307_01B	Automatic Transmission — TorqShift	307-460		Remover, Seal Pack
Excursion	307_01B	Automatic Transmission — TorqShift	307-384		Fixture Handle, Coast Clutch
Excursion	307_01B	Automatic Transmission — TorqShift	307-385		Fixture Body, Coast Clutch
Excursion	307_01B	Automatic Transmission — TorqShift	307-221	T89T-70010-A	Remover, Transmission Fluid Pump
Excursion	307_01B	Automatic Transmission — TorqShift	307-343	T95P-77001-AHR	Retaining Ring Pliers
Excursion	307_01B	Automatic Transmission — TorqShift	307-S383		Loading Fixture, Clutch
Excursion	307_01B	Automatic Transmission — TorqShift	308-001	T58L-101-B	Remover, Pilot Bearing
Excursion	307_01B	Automatic Transmission — TorqShift	307-014	T63L-77837-A	Installer, Front Pump Fluid Seal
Excursion	307_01B	Automatic Transmission — TorqShift	307-005	T59L-100-B	Slide Hammer
Excursion	307_01B	Automatic Transmission — TorqShift	307-D004	D89L-77000-A	Banding Tool, Transmission Pump
Excursion	307_01B	Automatic Transmission — TorqShift	307-001	TOOL-1175-AC	Remover, Bushing
Excursion	307_01B	Automatic Transmission — TorqShift	303-D026	D80P-4201-A	Depth Micrometer
Excursion	307_01B	Automatic Transmission — TorqShift	307-466		Alignment Pins, Pump
Excursion	307_01B	Automatic Transmission — TorqShift	307-387		Protector, Clutch Piston Seal
Excursion	307_01B	Automatic Transmission — TorqShift	307-436		Installer, Transmission Forward Clutch Assembly
Excursion	307_01B	Automatic Transmission — TorqShift	307-436-01		Bridge Adapter (use with 307-436)
Excursion	307_01B	Automatic Transmission — TorqShift	307-091	T81P-7902-C	Handle, Torque Converter
Excursion	307_01B	Automatic Transmission — TorqShift	307-222	T89T-70010-B	Aligner, Transmission Fluid Pump

Excursion_Tools.xls

Excursion	307_01B	Automatic Transmission — TorqShift	307-376		Installer, Fluid Filler Tube
Excursion	307_01B	Automatic Transmission — TorqShift	307-461		Installer, Seal Pack
Excursion	307_01B	Automatic Transmission — TorqShift	307-346		Retainer, Torque Converter
Excursion	307_020	Transaxle/Transmission Cooling	307-441		Disconnect Tool, Transmission Cooler Line
Excursion	307_020	Transaxle/Transmission Cooling	307-459		Disconnect Tool, Transmission Cooler Line
Excursion	307_050	Automatic Transaxle/Transmission External Controls	105-R0051		73 Digital Multimeter
Excursion	308_000	Manual Transaxle/Transmission and Clutch — General Information	100-002	TOOL-4201-C	Dial Indicator Gauge with Holding Fixture
Excursion	308_010	Clutch	307-005	T59L-100-B	Impact Slide Hammer
Excursion	308_010	Clutch	308-105	T85T-7137-A	Pilot Bearing Replacer
Excursion	308_010	Clutch	308-001	T58L-101-B	Puller
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-383		Installer, Output Shaft Oil Seal (4x4)
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-382		Installer, Output Shaft Oil Seal (4x2)
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	205-126	T78P-4851-A	Holding Fixture, Drive Pinion Flange
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-127	T87T-7025-AH	Socket, Mainshaft Locknut (36 mm)
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-375		Remover, Input Shaft Oil Seal
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	100-001	T50T-100-A	Slide Hammer
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-S385		Installer, Shifter Boot
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	014-00942		Transmission Jack
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-381		Fixture, Gear Pack
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	310-005	T77L-9533-B	Remover, Jet Plug
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	205-DS004	D80L-625-A	Shaft Protector Set
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	164R-3900		Gear/Bearing Heater
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	204-069	T81P-1104-C	Remover/Installer, Front Wheel Hub
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-127	T87P-7025-AH	Socket, Mainshaft Locknut (36 mm)
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-380		Centerplate Legs
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-132	T87T-7025-FH	Remover/Installer, Transmission Bearing Collet
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-415		Guide, Thrust Washer
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-416		Remover/Installer, Thrust Washer Bearing Cup
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-052	T77J-7025-B	Remover/Installer, Bearing Tube
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-029	T75L-7025-G	Remover, Bearing Collet Sleeve
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-092	T84T-7025-B	Screw, Bearing Removal Tube
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	205-D064	D84L-1123-A	Puller, Bearing
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	206-059	T94P-20202-B1	Installer, Wheel Speed Sensor Ring
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	164-R3900		Gear/Bearing Heater
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	014-00021		17.5 Ton Press
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	100-002	TOOL-4201-A	Dial Indicator Gauge With Holding Fixture
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-021	T75L-4201-A	Gauge, Clutch Housing
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	205-D027	D80L-1013-A	2 or 3 Jaw Puller
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-047	T77F-1102-A	Remover, Bearing Cup
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	303-DS005	D80L-100-A	Universal Puller Set

Excursion_Tools.xls

Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-S392		Remover, Input Shaft Bearing Cup
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-390		Installer, Countershaft Front Bearing Cup
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-391		Installer, Input Shaft Bearing Cup
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	205-153	T80T-4000-W	Adapter for 303-224 (Handle)
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	303-D019	D80L-100-Q	Collet, 3/4" to 7/8"
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-130	T87T-7025-DH	Installer, Shift Rail Needle Bearing
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	303-D011	D80L-100-G	Actuator Pin (Dia 3/16")
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-388		Installer, Countershaft Bearing Cup
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-389		Installer, Centerplate Mainshaft Bearing Cup
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	107-R0300		Heat Gun
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-384		Installer, Countershaft Rear Bearing
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	205-D055	D81L-4000-A	Handle
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	308-379		Installer, Input Shaft Oil Seal
Excursion	308_030	Manual Transaxle/Transmission — ZF 6-Speed	100-002	TOOL-4201-C	Dial Indicator Gauge with Holding Fixture
Excursion	308_07A	Four-Wheel Drive Systems	105-R0057		73III Automotive Meter
Excursion	308_07A	Four-Wheel Drive Systems	014-R1054		Vacuum Pump
Excursion	308_07A	Four-Wheel Drive Systems	205-798		Test Tool, Vacuum Hub
Excursion	308_07A	Four-Wheel Drive Systems	205-795		Vacuum Test Stand, Hublock
Excursion	308_07A	Four-Wheel Drive Systems	205-794		Vacuum Test Stand, Hub Bearing
Excursion	308_07A	Four-Wheel Drive Systems	205-797		Vacuum Test Tool, Knuckle Seal
Excursion	308_07A	Four-Wheel Drive Systems	205-796		Vacuum Test Plug, ABS Sensor
Excursion	308_07B	Transfer Case	205-153	T80T-4000-W	Adapter for 303-224 (Handle)
Excursion	308_07B	Transfer Case	205-076		Flange Remover
Excursion	308_07B	Transfer Case	205-126	T78P-4851-A	Holding Fixture, Drive Pinion Flange
Excursion	308_07B	Transfer Case	308-403		Installer, Output Shaft Oil Seal
Excursion	308_07B	Transfer Case	307-309	T94P-77001-BH	Remover, Torque Converter Oil Seal
Excursion	308_07B	Transfer Case	100-001	T50T-100-A	Slide Hammer
Excursion	308_07B	Transfer Case	307-003	T57L-500-B	Holding Fixture, Transmission
Excursion	308_07B	Transfer Case	205-138	T80T-4000-D	Installer, Drive Pinion Bearing Cup
Excursion	308_07B	Transfer Case	205-140	T80T-4000-F	Installer, Drive Pinion Bearing Cup
Excursion	308_07B	Transfer Case	308-412		Installer, Input Shaft Bearing
Excursion	308_07B	Transfer Case	308-408		Installer, Input Shaft Oil Seal
Excursion	308_07B	Transfer Case	308-410		Installer, Output Shaft Front Bearing
Excursion	308_07B	Transfer Case	308-399	Part of Kit 308-S398	Installer, Output Shaft Oil Slinger
Excursion	308_07B	Transfer Case	308-400	Part of Kit 308-S398	Installer, Output Shaft Oil Slinger
Excursion	308_07B	Transfer Case	308-401		Installer, Output Shaft Rear Bearing
Excursion	308_07B	Transfer Case	308-411		Installer, Output Shaft Rear Bearing
Excursion	308_07B	Transfer Case	205-155	T80T-4000-Y	Installer, Rear Axle Oil Seal
Excursion	308_07B	Transfer Case	308-402		Installer, Transfer Case Needle Bearing
Excursion	308_07B	Transfer Case	307-016	T66L-7003-C2	Remover, Front Pump Bushing

Excursion_Tools.xls

Excursion	308_07B	Transfer Case	308-406		Sleeve, Input Shaft Snap Ring
Excursion	308_07B	Transfer Case	308-405		Sleeve, Output Shaft Front Snap Ring
Excursion	308_07B	Transfer Case	308-404		Sleeve, Output Shaft Rear Snap Ring
Excursion	308_07B	Transfer Case	308-407		Socket, Sector Shaft Nut
Excursion	308_07B	Transfer Case	308-396		Spreader, Transfer Case Housing
Excursion	308_07B	Transfer Case	303-DS005	D80L-100-A	Universal Puller Set
Excursion	309_000	Exhaust System	309-D002	D95L-6000-A	Exhaust Back Pressure Gauge
Excursion	309_000	Exhaust System	303-476	T94P-9472-A	Socket, Exhaust Gas Oxygen Sensor
Excursion	310_000	Fuel System — General Information — Gasoline and Diesel	310-012	T80L-9974-B	Fuel Pressure Gauge
Excursion	310_000	Fuel System — General Information — Gasoline and Diesel	034-00007		100 Gallon Gasoline Hand Pump Storage Tanker
Excursion	310_000	Fuel System — General Information — Gasoline and Diesel	034-00005		100 Gallon Diesel Fuel Hand Pump Storage Tanker
Excursion	310_000	Fuel System — General Information — Gasoline and Diesel	310-D004	D87L-9280-A	Disconnect Tool, Spring Lock Coupling (3/8" yellow)
Excursion	310_000	Fuel System — General Information — Gasoline and Diesel	310-D005	D87L-9280-B	Disconnect Tool, Spring Lock Coupling (1/2" green)
Excursion	310_000	Fuel System — General Information — Gasoline and Diesel	310-S039	T90T-9550-S	Disconnect Tool Set, Spring Lock Coupling
Excursion	310_010	Fuel Tank and Lines — Gasoline and Diesel	310-S039	T90T-9550-S	Fuel Line Disconnect Tool
Excursion	310_010	Fuel Tank and Lines — Gasoline and Diesel	310-059	T97T-9275-A	Fuel Tank Locking Wrench
Excursion	310_030	Speed Control	105-R0057		73III Automotive Meter
Excursion	310_030	Speed Control	105-R025B		Flex Probe Kit
Excursion	310_030	Speed Control	418-F088	105-R0012	Diagnostic Tool, Restraint System (2 req'd)
Excursion	412_000	Climate Control System - General Information	176-R032A		R-134a Manifold Gauge Set
Excursion	412_000	Climate Control System - General Information	412-093	T94P-19623-E	Connector, Refrigerant Pressure Line
Excursion	412_000	Climate Control System - General Information	412-DS028	D93L-19703-B	Set, A/C Fittings
Excursion	412_000	Climate Control System - General Information	216-00001		Refrigerant Leak Detector
Excursion	412_000	Climate Control System - General Information	014-R1072		Pressure Tester
Excursion	412_000	Climate Control System - General Information	105-R0056		Fluke 77 III Automotive Meter
Excursion	412_000	Climate Control System - General Information	412-039	T84L-19623-B	Remover, Refrigerant Coupling Spring
Excursion	412_000	Climate Control System - General Information	412-042	T85T-18539-AH	Remover, Heater Hose Inlet Tube
Excursion	412_000	Climate Control System - General Information	176-00002		R-134a Refrigerant Center
Excursion	412_000	Climate Control System - General Information	023-00174		R-134a Refrigerant Center
Excursion	412_000	Climate Control System - General Information	023-00047		R-134a Manifold Gauge Set
Excursion	412_000	Climate Control System - General Information	164-R0721		120 Watt UV Spot Lamp
Excursion	412_000	Climate Control System - General Information	164-R6000		High Intensity UV Lamp — 12 Volt
Excursion	412_000	Climate Control System - General Information	164-R0775		R-134a Fluorescent Dye Injector
Excursion	412_000	Climate Control System - General Information	219-00069		Deluxe Injector Loop Kit
Excursion	412_000	Climate Control System - General Information	164-R6060		R-134a Leak Detection Dye
Excursion	412_000	Climate Control System - General Information	219-00022	part of 219-00023	A/C Flush and Purge Machine
Excursion	412_000	Climate Control System - General Information	219-00024	part of 219-00023	A/C Flush and Purge Fitting Kit
Excursion	412_000	Climate Control System - General Information	023-00162		1.2 CFM Vacuum Pump
Excursion	412_000	Climate Control System - General Information	023-00163		4.0 CFM Vacuum Pump
Excursion	412_000	Climate Control System - General Information	023-00155		Automatic Refrigerant Charging Meter

Excursion_Tools.xls

Excursion	412_000	Climate Control System - General Information	412-DS036		Adapter Set, In-Line Connector Leak Check
Excursion	412_000	Climate Control System - General Information	164-R0775		Dye/Lubricant Injector
Excursion	412_000	Climate Control System - General Information	219-00069		Add-On Module Kit
Excursion	412_000	Climate Control System - General Information	198-00003		Refrigerant Identifier with Air-Radicator
Excursion	412_000	Climate Control System - General Information	416-D002	D95L-7559-A	Vacuum Pump Kit
Excursion	412_000	Climate Control System - General Information	167-R4700		30oz Sure Shot Pressure Sprayer
Excursion	412_010	Air Distribution and Filtering	415-001	T87P-19061-A	Remover, Audio Unit
Excursion	412_03A	Air Conditioning	412-001	T71P-19703-B	Remover, Compressor Pulley
Excursion	412_03A	Air Conditioning	412-065	T89P-19623-EH	Installer, A/C Compressor Coil
Excursion	412_03A	Air Conditioning	412-103	T95L-19703-AH	Holding Fixture, Compressor Clutch
Excursion	412_03A	Air Conditioning	412-078	T91L-19623-CH	Installer, A/C Compressor Field Coil
Excursion	412_03A	Air Conditioning	412-067	T89P-19623-FH	Remover, A/C Compressor Field Coil
Excursion	412_03A	Air Conditioning	412-094	T94P-19623-F	Protector, A/C Compressor Shaft Oil Seal
Excursion	412_03A	Air Conditioning	412-059	T89P-19623-BH	Remover, A/C Compressor Shaft Oil Seal
Excursion	412_03A	Air Conditioning	412-058	T89P-19623-AH	Installer, A/C Compressor Shaft Oil Seal
Excursion	412_03A	Air Conditioning	412-063	T89P-19623-DH	Remover, A/C Compressor Snap Ring
Excursion	412_03A	Air Conditioning	100-010	T71P-19703-C	Remover, O-Ring Seal
Excursion	412_03A	Air Conditioning	412-035	T83L-19990-B	Remover, Broken Orifice
Excursion	412_03A	Air Conditioning	412-034	T83L-19990-A	Remover/Installer, Fixed Orifice
Excursion	413_000	Instrument Cluster and Panel Illumination	105-R0057		73III Automotive Meter
Excursion	413_000	Instrument Cluster and Panel Illumination	418-F088	105-R0012	Diagnostic Tool, Restraint System (2 Req'd)
Excursion	413_010	Instrument Cluster	105-R0057		73III Automotive Meter
Excursion	413_010	Instrument Cluster	014-R1063		Instrument Gauge System Tester
Excursion	413_060	Horn	105-R0057		73III Automotive Meter
Excursion	413_080	Information and Message Center	105-R0057		73III Automotive Meter
Excursion	413_090	Warning Devices	105-R0057		73III Automotive Meter
Excursion	413_130	Parking Aid	105-R0057		73III Automotive Meter
Excursion	414_000	Charging System — General Information	105-R0057		73III Automotive Meter
Excursion	414_000	Charging System — General Information	010-00736		SABRE Premium Battery and Electrical System Tester
Excursion	414_000	Charging System — General Information	162-00004		Micro 490 Digital Battery Analyzer
Excursion	414_010	Battery, Mounting and Cables	162-00004		Micro 490 Digital Battery Analyzer
Excursion	415_000	Entertainment System — General Information	105-R0057		73III Automotive Meter
Excursion	415_010	Audio Unit	415-001	T87P-19061-A	Remover, Audio Unit
Excursion	417_010	Exterior Lighting	105-R0057		73III Automotive Meter
Excursion	417_020	Interior Lighting	105-R0057		73III Automotive Meter
Excursion	417_040	Daytime Running Lamps	105-R0057		73III Automotive Meter
Excursion	418_000	Module Communications Network	105-R0057		73III Automotive Meter
Excursion	419_010	Anti-Theft — PATS	105-R0057		73III Automotive Meter
Excursion	419_020	Remote Convenience	105-R0057		73III Automotive Meter
Excursion	419_100	Multifunction Electronic Modules	105-R0057		73III Automotive Meter

Excursion_Tools.xls

Excursion	501_050	Interior Trim and Ornamentation	501-010	T77L-2100-A	Torx Bit, Safety Belt Bolt
Excursion	501_090	Rear View Mirrors	105-R0057		73III Automotive Meter
Excursion	501_090	Rear View Mirrors	501-025	T94P-17700AH	Installer, Rear View Mirror
Excursion	501_090	Rear View Mirrors	107-R0300		Heat Gun
Excursion	501_100	Seating	105-R0057		73III Automotive Meter
Excursion	501_100	Seating	418-133	40-009	Diagnostic Tool, Restraint System (2 req'd)
Excursion	501_100	Seating	501-010	T77L-2100-A	Torx Bit, Safety Belt Bolt
Excursion	501_110	Glass, Frames and Mechanisms	105-R0057		73III Automotive Meter
Excursion	501_110	Glass, Frames and Mechanisms	107-R0300		Heat Gun
Excursion	501_110	Glass, Frames and Mechanisms	164-R2450		Interior Auto Glass Cut-Out Knife Kit
Excursion	501_110	Glass, Frames and Mechanisms	164-R2459		The Pumper
Excursion	501_140	Handles, Locks, Latches and Entry Systems	105-R0057		73III Automotive Meter
Excursion	501_140	Handles, Locks, Latches and Entry Systems	501-D011	D80L-23200-A	Heavy Duty Riveter
Excursion	501_160	Wipers and Washers	105-R0057		73III Automotive Meter
Excursion	501_160	Wipers and Washers	105-R025B		Flex Probe Kit
Excursion	501_160	Wipers and Washers	010-00736		SABRE Premium Battery and Electrical System Tester
Excursion	501_170	Roof Opening Panel	105-R0057		73III Automotive Meter
Excursion	501_20A	Safety Belt System	100-F012	134-00018	D-Ring Installation Kit
Excursion	501_20A	Safety Belt System	501-010	T77L-2100-A	Torx Bit, Safety Belt Bolt
Excursion	501_20A	Safety Belt System	501-D012	D83L-2100-A	Tool Set, Torx Bit
Excursion	501_20B	Supplemental Restraint System	105-R0057		FLUKE 73III Automotive Meter
Excursion	501_20B	Supplemental Restraint System	418-F088	105-R0012	Diagnostic Tool, Restraint System (2 req'd)