


# Engine Oil and Oil Filter Element


1. **NOTE:** The oil filter housing drain is open by completely unscrewing the oil filter cover. Allow the oil filter housing to drain before removing the oil filter cover and oil filter element.

Remove the oil filter cover and oil filter element assembly.

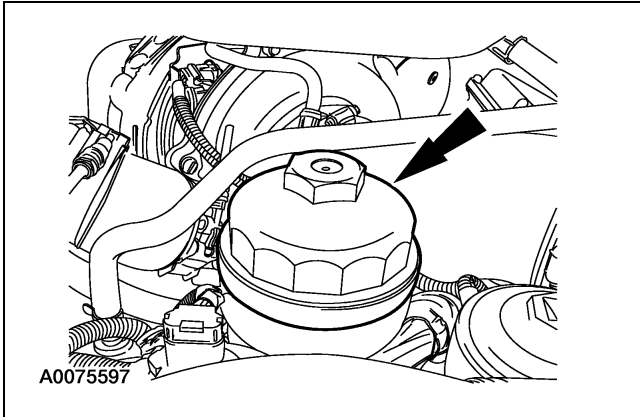


2. **NOTE:** The oil filter element snaps into the oil filter cover.

Remove and discard the oil filter element and the oil filter cover O-ring.

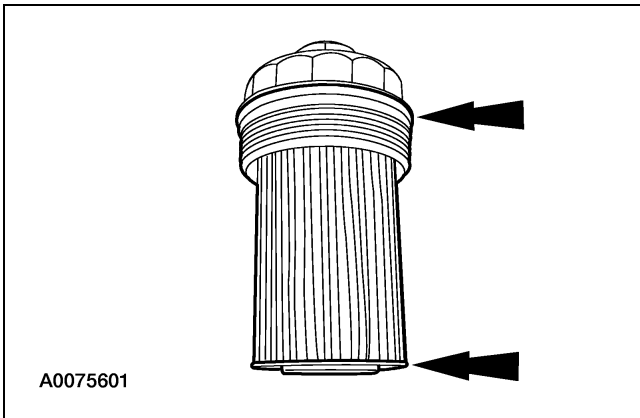


3. Install a new oil filter cover O-ring and oil filter element.

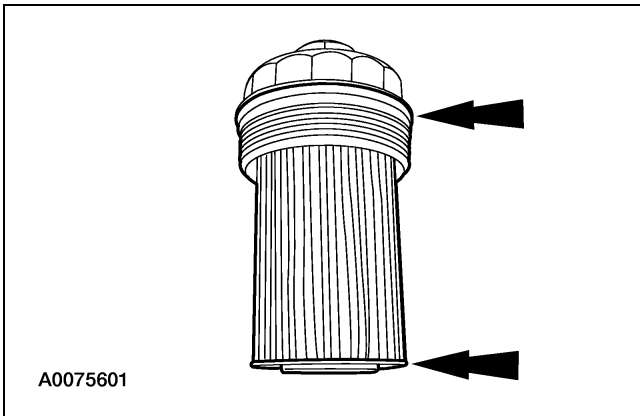


4. **NOTE:** Apply clean engine oil to the oil filter cover O-ring.


Install the oil filter cover and oil filter element.

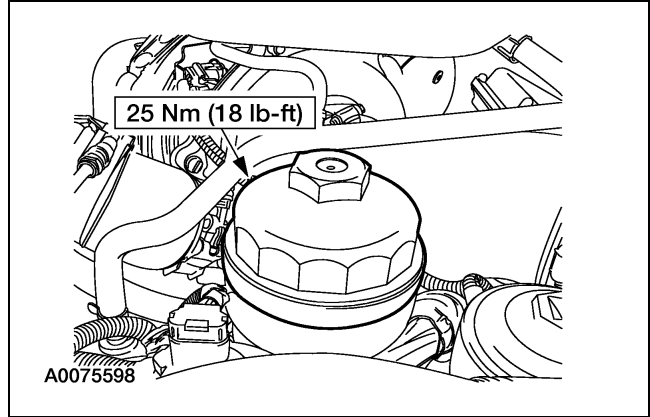


5. Remove the oil pan drain plug and drain the engine oil.

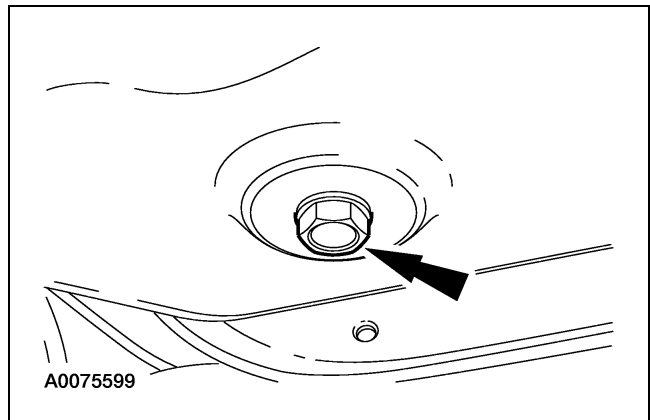

6. Clean and inspect the oil pan drain plug and gasket, replace if necessary.

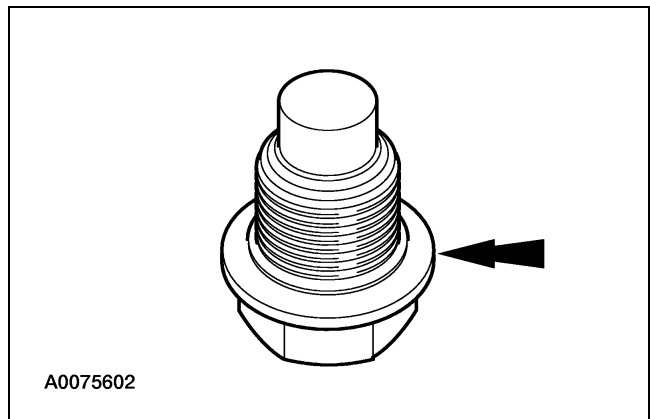

7. Install the oil pan drain plug.

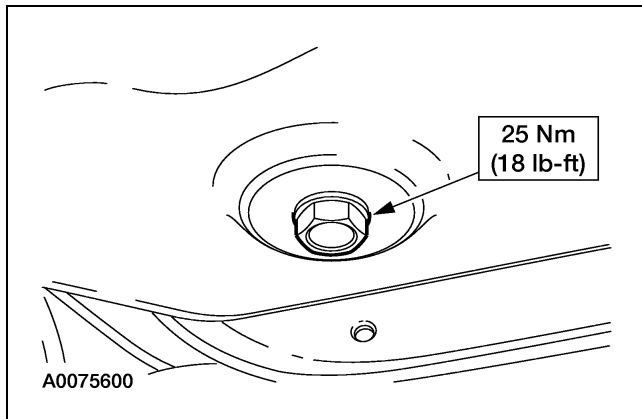

8. Fill the engine with clean engine oil. Fill capacity is 14.2 liters (15 quarts) with a new oil filter.

Run the engine and check for leaks.